



Your Low Cost Printing Solution Since 1994

Refill Instructions: Epson T273XL Empty Cartridges



Preparation:

- MIS Refill Kit
- Newspaper or Paper Towels
- A work area or bench
- Rubber gloves from the kit (bleach and water will take ink off your hands)

Kit Contents:

- 5x - 10cc Syringe
- 5x - 4" Needle
- 1x - Set 5 T273XL Empty Cartridges
- 1x - Set D2 + MK 5 color inkset.
- 1x - Gloves

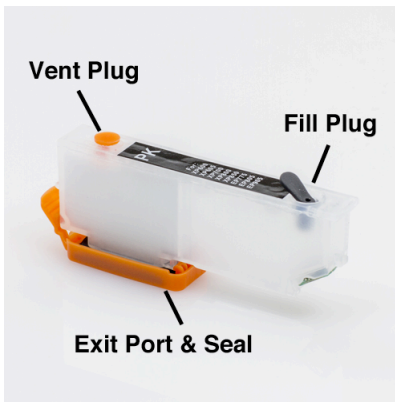


Figure 1

Filling:

1. Attach the needle to the syringe and load it with 10-12cc of ink
2. Remove the Fill Plug and Vent Plug shown in Figure 1
3. Insert the needle and slowly inject ink into the chamber.
 - a. It is best to angle the needle toward the sponge and allow time for the sponge to soak up all the ink. Let the cartridge sit if necessary.
 - b. The Orange Exit Port Clip must be installed to prevent the cartridge from leaking.
 - c. The thinner cartridges each use 12cc of D2 Dyebased ink, the wide black cartridge will use 20cc of MISPRO Universal Black (MK) Pigment ink.
4. Replace the Fill Plug.
5. Allow the cartridge to rest for 5-10 minutes during which the sponge will slowly fill with ink.
6. Remove Orange Clip before installation.
7. Keep the Orange Clip as it is needed to store or refill the cartridge.

ATTENTION: Our cartridges must be used as a complete set. Mixing our cartridges with other aftermarket or OEM cartridges at any point is not supported and may corrupt the auto reset chips on our cartridges.

CAUTION: Damage to the printer may occur if you install a cartridge without a chip in your printer. Check each cartridge to ensure that the chip is properly installed and has not become loose before installing the cartridge in your printer. If the chip has fallen off or become loose, use some Dap Fun-Tak or other re-useable adhesive to reattach the chip. (purchase from accessory page).

ATTENTION: You must remove the vent plug on the top of the cartridge to open the vent hole or the cartridge will not work.